

スイッチ生産終了型式一覧 (カタログ販売終了品)

<13AL> 昭光式スイッチ(シリーズ終了)	15GL-140-0010-E	8A2122-Z	8B2022-Z
13AL-060-0000-X	15GL-140-0030-E	8A3011C-Z	8B2041-Z
13AL-060-0010-X	15GL-140-0080-E	8A3012C-Z	8B2042-Z
13AL-060-0020-X	15GL-140-0160-E	8A3021-Z	8B2051-Z
13AL-060-0030-X	15GL-141-0000-E	8A3022C-Z	8B2052-Z
13AL-060-0040-X	15GL-141-0001-E	8A3022-Z	8B2061-Z
13AL-060-0050-X	15GL-141-0010-E	8A3041C-Z	8B2062-Z
13AL-090-0000-X	15GL-141-0030-E	8A3042C-Z	8B3012-Z
13AL-090-0010-X	15GL-141-0080-E	8A3042-Z	8B3021-Z
13AL-090-0020-X	15GL-141-0160-E	8A3051C-Z	8B3022-Z
13AL-090-0030-X	15GL-180-0000-E	8A3051-Z	8B4012-Z
13AL-090-0040-X	15GL-180-0001-E	8A3052C-Z	8B4021-Z
13AL-090-0050-X	15GL-180-0010-E	8A3052-Z	8B4022-Z
13AL-110-0000-X	15GL-180-0030-E	8A3061C-Z	<8C> トグルスイッチ
13AL-110-0010-X	15GL-180-0080-E	8A3061-Z	8C1011C-Z
13AL-110-0020-X	15GL-180-0160-E	8A3062C-Z	8C1012C-Z
13AL-110-0030-X	15GL-181-0000-E	8A3062-Z	8C1021C-Z
13AL-110-0040-X	15GL-181-0001-E	8A4011C-Z	8C1022-Z
13AL-110-0050-X	15GL-181-0010-E	8A4012C-Z	8C1041-Z
<13BL> 昭光式スイッチ(シリーズ終了)	15GL-181-0030-E	8A4012-Z	8C1042-Z
13BL-060-0000-X	15GL-181-0080-E	8A4021-Z	8C1051-Z
13BL-060-0010-X	15GL-181-0160-E	8A4022C-Z	8C1052-Z
13BL-060-0020-X	<8A> トグルスイッチ	8A4022C-Z	8C1061-Z
13BL-060-0030-X	8A1021C-Z	8A4041C-Z	8C1062-Z
13BL-060-0040-X	8A1041C-Z	8A4041-Z	8C2011C-Z
13BL-060-0050-X	8A1041-Z	8A4042C-Z	8C2012C-Z
13BL-090-0000-X	8A1042C-Z	8A4042-Z	8C2012-Z
13BL-090-0010-X	8A1042-Z	8A4051C-Z	8C2021C-Z
13BL-090-0020-X	8A1051C-Z	8A4051-Z	8C2022C-Z
13BL-090-0030-X	8A1051-Z	8A4052C-Z	8C2022-Z
13BL-090-0040-X	8A1052C-Z	8A4052-Z	8C2041-Z
13BL-090-0050-X	8A1052-Z	8A4061C-Z	8C2042-Z
13BL-110-0000-X	8A1061C-Z	8A4061-Z	8C2051-Z
13BL-110-0010-X	8A1061-Z	8A4062C-Z	8C2052-Z
13BL-110-0020-X	8A1062C-Z	8A4101C-Z	8C2061-Z
13BL-110-0030-X	8A1062-Z	8A4102C-Z	8C2062-Z
13BL-110-0040-X	8A2012C-Z	8A4102-Z	8C3012-Z
13BL-110-0050-X	8A2021C-Z	8A4111C-Z	8C3021-Z
<15EL> 昭光式スイッチ(シリーズ終了)	8A2022C-Z	8A4111-Z	8C3022-Z
15EL-122-0000-E	8A2041C-Z	8A4112C-Z	8C4011-Z
15EL-122-0010-E	8A2041-Z	8A4112-Z	8C4012-Z
15EL-122-0020-E	8A2042-Z	8A4121C-Z	8C4021-Z
15EL-122-0030-E	8A2051-Z	8A4121-Z	8C4022-Z
15EL-122-0040-E	8A2052C-Z	8A4122C-Z	<8D> トグルスイッチ(シリーズ終了)
15EL-122-0050-E	8A2052-Z	8A4122-Z	8D1011C-Z
15EL-152-0000-E	8A2061C-Z	<8B> トグルスイッチ	8D1011-Z
15EL-152-0010-E	8A2061-Z	8B1011C-Z	8D1012C-Z
15EL-152-0020-E	8A2062C-Z	8B1012C-Z	8D1012-Z
15EL-152-0030-E	8A2062-Z	8B1021C-Z	8D1021C-Z
15EL-152-0040-E	8A2101C-Z	8B1022C-Z	8D1021-Z
15EL-152-0050-E	8A2101-Z	8B1022-Z	8D1022C-Z
15EL-182-0000-E	8A2102C-Z	8B1041-Z	8D1022-Z
15EL-182-0010-E	8A2102-Z	8B1042-Z	8D1041-Z
15EL-182-0020-E	8A2111C-Z	8B1051-Z	8D1042-Z
15EL-182-0030-E	8A2111-Z	8B1061-Z	8D1051-Z
15EL-182-0040-E	8A2112C-Z	8B1062-Z	8D1052-Z
15EL-182-0050-E	8A2112-Z	8B2011C-Z	8D1061-Z
<15GL> 昭光式スイッチ(シリーズ終了)	8A2121C-Z	8B2012C-Z	8D1062-Z
15GL-140-0000-E	8A2121-Z	8B2021C-Z	8D2011C-Z
15GL-140-0001-E	8A2122C-Z	8B2022C-Z	8D2011-Z

スイッチ生産終了型式一覧 (カタログ販売終了品)

8D2012C-Z	8F2021-Z	8G2062C-Z	8HD2052-Z
8D2012-Z	8F2022C-Z	8G2062-Z	8HD2061-Z
8D2021C-Z	8F2022-Z	8G2064C-Z	8HD2062-Z
8D2021-Z	8F2041-Z	8G2064-Z	<8J> トグルスイッチ
8D2022C-Z	8F2042-Z	8G2066C-Z	8J1011C-Z
8D2022-Z	8F2051-Z	8G2066-Z	8J1021C-Z
8D2041-Z	8F2052-Z	<8GA> トグルスイッチ	8J1022C-Z
8D2042-Z	8F2061-Z	8GA1022-Z	8J1041-Z
8D2051-Z	8F2062-Z	8GA1024-Z	8J1042-Z
8D2052-Z	8F3011-Z	8GA1026-Z	8J1051-Z
8D2061-Z	8F3012-Z	8GA2016-Z	8J1052-Z
8D2062-Z	8F3021-Z	8GA2022-Z	8J1061-Z
8D3011-Z	8F3022-Z	8GA2024-Z	8J1062-Z
8D3012-Z	8F4012-Z	8GA2026-Z	8J2011C-Z
8D3021-Z	8F4021-Z	<8GD> トグルスイッチ(シリーズ終了)	8J2012C-Z
8D3022-Z	8F4022-Z	8GD1012-Z	8J2021C-Z
8D4011-Z	<8G> トグルスイッチ	8GD1014-Z	8J2022C-Z
8D4012-Z	8G1012C-Z	8GD1016-Z	8J2022-Z
8D4021-Z	8G1014C-Z	8GD1022-Z	8J2041-Z
8D4022-Z	8G1016C-Z	8GD1024-Z	8J2042-Z
<8E> トグルスイッチ	8G1022C-Z	8GD1026-Z	8J2051-Z
8E1012C-Z	8G1024C-Z	8GD2012-Z	8J2052-Z
8E1022C-Z	8G1026C-Z	8GD2014-Z	8J2061-Z
8E1022-Z	8G1026-Z	<8GS> トグルスイッチ(シリーズ終了)	8J2062-Z
8E1041-Z	8G1042C-Z	8GS1012-Z	8J3011-Z
8E1042-Z	8G1044C-Z	8GS1014-Z	8J3022-Z
8E1051-Z	8G1044-Z	8GS1016-Z	8J4012-Z
8E1052-Z	8G1046C-Z	8GS2012-Z	8J4021-Z
8E1061-Z	8G1046-Z	8GS2014-Z	8J4022-Z
8E1062-Z	8G1052C-Z	8GS2016-Z	<8M> レバー&ロッカースイッチ
8E2012-Z	8G1052-Z	<8H> レバー&ロッカースイッチ	8M1011C-Z
8E2021C-Z	8G1054C-Z	8H1022-Z	8M1021C-Z
8E2022C-Z	8G1054-Z	8H1042-Z	8M1021-Z
8E2022-Z	8G1056C-Z	8H1051-Z	8M1041-Z
8E2041-Z	8G1056-Z	8H1052-Z	8M1051-Z
8E2042-Z	8G1062C-Z	8H1062-Z	8M1061-Z
8E2051-Z	8G1062-Z	8H2011C-Z	8M2011C-Z
8E2052-Z	8G1064C-Z	8H2021C-Z	8M2021C-Z
8E2061-Z	8G1066C-Z	8H2022-Z	8M2021-Z
8E2062-Z	8G1066-Z	8H2042-Z	8M2041-Z
8E3012-Z	8G2012C-Z	8H2051-Z	8M2051-Z
8E3021-Z	8G2014C-Z	8H2052-Z	8M2061-Z
8E3022-Z	8G2016C-Z	8H2061-Z	8M3021-Z
8E4012-Z	8G2022C-Z	<8HD> レバー&ロッカースイッチ	8M4021-Z
8E4021-Z	8G2022-Z	8HD1011C-Z	<8N> 押ボタンスイッチ
8E4022-Z	8G2024C-Z	8HD1012-Z	8N1011C-Z
<8F> トグルスイッチ	8G2024-Z	8HD1021C-Z	8N1012-Z
8F1012C-Z	8G2026C-Z	8HD1021-Z	8N2011C-Z
8F1021C-Z	8G2026-Z	8HD1022-Z	8N2021C-Z
8F1021-Z	8G2042C-Z	8HD1042-Z	<8P> 押ボタンスイッチ
8F1022C-Z	8G2042-Z	8HD1051-Z	8P1012-Z
8F1022-Z	8G2044C-Z	8HD1052-Z	8P1022-Z
8F1041-Z	8G2044-Z	8HD1061-Z	8P2012-Z
8F1042-Z	8G2046C-Z	8HD1062-Z	8P2022-Z
8F1051-Z	8G2046-Z	8HD2011C-Z	8P3011-Z
8F1052-Z	8G2052C-Z	8HD2012-Z	8P3021-Z
8F1061-Z	8G2052-Z	8HD2021C-Z	8P4011-Z
8F1062-Z	8G2054C-Z	8HD2022-Z	8P4021-Z
8F2011C-Z	8G2054-Z	8HD2041-Z	<8Q> レバー&ロッカースイッチ(シリーズ終了)
8F2012C-Z	8G2056C-Z	8HD2042-Z	8Q1011-Z
8F2021C-Z	8G2056-Z	8HD2051-Z	8Q1021C-Z

スイッチ生産終了型式一覧 (カタログ販売終了品)

8Q1021-Z	8SS2012C-Z	AP2L-6M-Z	ATE1H-2J3-10-Z
8Q1041-Z	8SS2022C-Z	AP2L-6S-Z	ATE1H-6F3-10-Z
8Q1051-Z	<8V-M> レバー&ロッカースイッチ	AP2M-2H-Z	ATE1H-6J3-10-Z
8Q1061-Z	8V1012C-M-Z	AP2M-2M-Z	ATE1H-7F3-10-Z
8Q2011C-Z	8V1022C-M-Z	AP2M-2S-Z	ATE1H-7J3-10-Z
8Q2011-Z	8V1022-M-Z	AP2M-6S-Z	ATE1H-7M3-10-Z
8Q2021C-Z	8V1042-M-Z	AP2R-2H-Z	ATE2D-2J3-10-Z
8Q2021-Z	8V1052-M-Z	AP2R-2S-Z	ATE2D-6J3-10-Z
8Q2041-Z	8V2022C-M-Z	AP2R-2S-Z	ATE2D-7F3-10-Z
8Q2051-Z	8V2022-M-Z	<APE> 押ボタンスイッチ	ATE2D-7J3-10-Z
8Q2061-Z	8V2042-M-Z	APE2F-5M-10-Z	ATE2D-7M3-10-Z
8Q3011-Z	8V2052-M-Z	<AS> スライドスイッチ	ATE2E-2F3-10-Z
8Q3021-Z	<8V-Q> レバー&ロッカースイッチ(シリーズ終了)	AS1E-6M-10-Z	ATE2E-2J3-10-Z
8Q4011-Z	8V1012-Q-Z	AS2E-2M-10-Z	ATE2E-5F3-10-Z
8Q4021-Z	8V1022-Q-Z	AS2E-5M-10-Z	ATE2E-5M3-10-Z
<8R> 押ボタンスイッチ	8V1042-Q-Z	AS2E-6M-10-Z	ATE2E-6F3-10-Z
8R1011B-N-Z	8V1052-Q-Z	AS2P-2M-10-Z	ATE2E-6J3-10-Z
8R1012B-N-Z	8V1062-Q-Z	AS2P-5M-10-Z	ATE2E-6M3-10-Z
8R1012-N-Z	8V2012-Q-Z	AS2P-6M-10-Z	ATE2E-7F3-10-Z
8R2011B-N-Z	8V2022-Q-Z	<ASE> スライドスイッチ	ATE2E-7J3-10-Z
8R2012B-N-Z	8V2042-Q-Z	ASE1E-5M-10-Z	ATE2E-7M3-10-Z
8R2012-N-Z	<8W> 押ボタンスイッチ	ASE1E-6M-10-Z	ATE2F-2F3-10-Z
<8S> トグルスイッチ	8W1011-N-Z	ASE2E-5M-10-Z	ATE2F-2J3-10-Z
8S1011C-Z	8W1021B-N-Z	ASE2E-6M-10-Z	ATE2F-5F3-10-Z
8S1011-Z	8W1022-N-Z	ASE2N-5M-10-Z	ATE2F-5M3-10-Z
8S1012-Z	8W2011-N-Z	ASE2P-2M-10-Z	ATE2F-6F3-10-Z
8S1021C-Z	8W2021B-N-Z	ASE2P-5M-10-Z	ATE2F-6J3-10-Z
8S1021-Z	8W2022B-N-Z	ASE2P-6M-10-Z	ATE2F-6M3-10-Z
8S1022-Z	8W2022-N-Z	<ATE> トグルスイッチ	ATE2F-7F3-10-Z
8S1041-Z	<8Y> 押ボタンスイッチ	ATE1D-2J3-10-Z	ATE2F-7J3-10-Z
8S1042-Z	8Y4011-Z	ATE1D-5F3-10-Z	ATE2F-7M3-10-Z
8S1051-Z	8Y4012-Z	ATE1D-6F3-10-Z	ATE2G-2J3-10-Z
8S1052-Z	<ALE> レバー&ロッカースイッチ	ATE1D-6J3-10-Z	ATE2G-5F3-10-Z
8S1061-Z	ALE1E-5M4-10-Z	ATE1D-7F3-10-Z	ATE2G-6F3-10-Z
8S1062-Z	ALE1F-5M4-10-Z	ATE1D-7F3-10-Z	ATE2G-6J3-10-Z
8S2011C-Z	ALE1G-5M4-10-Z	ATE1D-7J3-10-Z	ATE2G-6M3-10-Z
8S2011-Z	ALE1H-2M4-10-Z	ATE1D-7M3-10-Z	ATE2G-7F3-10-Z
8S2012-Z	ALE1H-5M4-10-Z	ATE1E-2J3-10-Z	ATE2G-7J3-10-Z
8S2021C-Z	ALE2E-2M4-10-Z	ATE1E-5F3-10-Z	ATE2G-7M3-10-Z
8S2021-Z	ALE2E-5M4-10-Z	ATE1E-6F3-10-Z	ATE2H-2F3-10-Z
8S2022-Z	ALE2F-2M4-10-Z	ATE1E-6J3-10-Z	ATE2H-2J3-10-Z
8S2041-Z	ALE2F-5M4-10-Z	ATE1E-7F3-10-Z	ATE2H-2M3-10-Z
8S2042-Z	ALE2G-2M4-10-Z	ATE1E-7J3-10-Z	ATE2H-5F3-10-Z
8S2051-Z	ALE2G-5M4-10-Z	ATE1E-7M3-10-Z	ATE2H-5M3-10-Z
8S2052-Z	ALE2H-2M4-10-Z	ATE1F-2F3-10-Z	ATE2H-6F3-10-Z
8S2061-Z	ALE2H-5M4-10-Z	ATE1F-2J3-10-Z	ATE2H-6J3-10-Z
8S2062-Z	ALE2N-2M4-10-Z	ATE1F-5F3-10-Z	ATE2H-6M3-10-Z
8S3011-Z	ALE2P-2M4-10-Z	ATE1F-5M3-10-Z	ATE2H-7F3-10-Z
8S3012-Z	ALE2R-2M4-10-Z	ATE1F-6F3-10-Z	ATE2H-7J3-10-Z
8S3021-Z	ALE2S-2M4-10-Z	ATE1F-6J3-10-Z	ATE2H-7M3-10-Z
8S3022-Z	ALE2T-2M4-10-Z	ATE1F-7J3-10-Z	ATE2N-2F3-10-Z
8S4011-Z	<AP> 押ボタンスイッチ	ATE1F-7M3-10-Z	ATE2N-2M3-10-Z
8S4012-Z	AP1B-2H-Z	ATE1G-2F3-10-Z	ATE2N-5F3-10-Z
8S4021-Z	AP1B-2M-Z	ATE1G-2J3-10-Z	ATE2N-5M3-10-Z
8S4022-Z	AP1B-2S-Z	ATE1G-6F3-10-Z	ATE2N-6F3-10-Z
<8SS> スライドスイッチ	AP1B-6M-Z	ATE1G-6J3-10-Z	ATE2N-6M3-10-Z
8SS1011C-Z	AP1B-6S-Z	ATE1G-7F3-10-Z	ATE2P-2F3-10-Z
8SS1012C-Z	AP2L-2H-Z	ATE1G-7J3-10-Z	ATE2P-2M3-10-Z
8SS1022C-Z	AP2L-2M-Z	ATE1G-7M3-10-Z	ATE2P-5F3-10-Z
8SS2011C-Z	AP2L-2S-Z	ATE1H-2F3-10-Z	ATE2P-5M3-10-Z

スイッチ生産終了型式一覧 (カタログ販売終了品)

ATE2P-6M3-10-Z	CF-LA-1AC4-6C	CF-LA-2KL-4C	ATE2P-6F3-10-Z
ATE2R-2F3-10-Z	CF-LA-1AC-4C	CF-LA-2KL-5	CFPB-1CC-3O2W
ATE2R-2M3-10-Z	CF-LA-1AC-5	CF-LA-2KL-5C	CFPB-1CC-3O6W
ATE2R-5F3-10-Z	CF-LA-1AC-5C	CF-LA-2KL-6	CFPB-1CC-3O9W
ATE2R-5M3-10-Z	CF-LA-1AC-6	CF-LA-2KL-6C	CFPB-1CC-4W1W
ATE2R-6F3-10-Z	CF-LA-1AC-6C	CF-LA-2KZ2-1	CFPB-1CC-4W2W
ATE2R-6M3-10-Z	CF-LA-1AL-3C	CF-LA-2KZ2-2C	CFPB-1CC-4W6W
ATE2S-2F3-10-Z	CF-LA-1AL-4	CF-LA-2KZ2-4	CFPB-1CC-4W9W
ATE2S-2M3-10-Z	CF-LA-1AL-4C	CF-LA-2KZ2-4C	CFPB-1CC-5B1W
ATE2S-5F3-10-Z	CF-LA-1AL-5	CF-LA-2KZ2-6	CFPB-1CC-5B2W
ATE2S-5M3-10-Z	CF-LA-1AL-5C	CF-LA-2KZ2-6C	CFPB-1CC-5B6W
ATE2S-6F3-10-Z	CF-LA-1AL-6	<CF-LD> レバースイッチ	CFPB-1CC-5B9W
ATE2S-6M3-10-Z	CF-LA-1AL-6C	CF-LD- 1 DC4-AG2	CFPB-1CC-5G1W
ATE2T-2F3-10-Z	CF-LA-1AZ2-2	CF-LD- 1 DC4-AG2W	CFPB-1CC-5G2W
ATE2T-2M3-10-Z	CF-LA-1AZ2-2C	CF-LD- 1 DC4-AR2	CFPB-1CC-5G6W
ATE2T-5F3-10-Z	CF-LA-1AZ2-4	CF-LD- 1 DC4-AR2W	CFPB-1CC-5G9W
ATE2T-5M3-10-Z	CF-LA-1AZ2-4C	CF-LD- 1 DC4-AW2	CFPB-1CC-5Y1W
ATE2T-6F3-10-Z	CF-LA-1AZ2-5	CF-LD- 1 DC4-AW2W	CFPB-1CC-5Y2W
ATE2T-6M3-10-Z	CF-LA-1AZ2-5C	CF-LD- 1 DC6-AG2	CFPB-1CC-5Y6W
<ATE4/ATLE4>> トグルスイッチ	CF-LA-1AZ2-6	CF-LD- 1 DC6-AG2W	CFPB-1CC-5Y9W
ATE42D-2M3-Z	CF-LA-1AZ2-6C	CF-LD- 1 DC6-AR2	<CFT2> トグルスイッチ
ATE42D-2M4-Z	CF-LA-2KC-1	CF-LD- 1 DC6-AR2W	CFT2-1FC4-AW
ATE42E-2M3-Z	CF-LA-2KC-1C	CF-LD- 1 DC6-AW2	CFT2-1FC6-AW
ATE44D-2M3-Z	CF-LA-2KC-2	CF-LD- 1 DC6-AW2W	CFT2-1FC-AW
ATLE2N-5M3-Z	CF-LA-2KC-2C	CF-LD- 1 DC-AG2	CFT2-2NC4-AW
ATLE42D-6M3-Z	CF-LA-2KC-3	CF-LD- 1 DC-AG2W	CFT2-2NC6-AW
ATLE42E-2M3-Z	CF-LA-2KC-4	CF-LD- 1 DC-AR2	CFT2-2NC-AW
ATLE42E-6M3-Z	CF-LA-2KC4-1	CF-LD- 1 DC-AR2W	CFT2-2PC4-AW
ATLE44D-2M3-Z	CF-LA-2KC4-1C	CF-LD- 1 DC-AW2	CFT2-2PC6-AW
ATLE44D-2M4-Z	CF-LA-2KC4-2	CF-LD- 1 DC-AW2W	CFT2-2PC-AW
ATLE44E-2M3-Z	CF-LA-2KC4-2C	<CFPB> 蛍光式スイッチ	CFT2-2RC4-AW
ATLE44E-2M4-Z	CF-LA-2KC4-3	CFPB-1CC-1B1W	CFT2-2RC6-AW
<BT> トグルスイッチ (シリーズ終了)	CF-LA-2KC4-3C	CFPB-1CC-1B2W	CFT2-2RC-AW
BT1D-2M4-Z	CF-LA-2KC4-4	CFPB-1CC-1B6W	CFT2-2SC4-AW
BT1E-2M4-Z	CF-LA-2KC4-4C	CFPB-1CC-1B9W	CFT2-2SC6-AW
BT1F-2M4-Z	CF-LA-2KC4-5	CFPB-1CC-1G1W	CFT2-2SC-AW
BT1G-2M4-Z	CF-LA-2KC4-5C	CFPB-1CC-1G2W	CFT2-2TC4-AW
BT1H-2M4-Z	CF-LA-2KC4-6	CFPB-1CC-1G6W	CFT2-2TC6-AW
BT2N-2M4-Z	CF-LA-2KC4-6C	CFPB-1CC-1G9W	CFT2-2TC-AW
BT2P-2M4-Z	CF-LA-2KC-4C	CFPB-1CC-1O1W	<CL-LB> ロッカースイッチ
BT2R-2M4-Z	CF-LA-2KC5-1	CFPB-1CC-1O2W	CL-LB-11A1-S00-21A0-0-000
BT2S-2M4-Z	CF-LA-2KC5-1C	CFPB-1CC-1O6W	CL-LB-11B1-S00-21A0-0-000
BT2T-2M4-Z	CF-LA-2KC5-2	CFPB-1CC-1O9W	<CLP44> 蛍光式スイッチ (シリーズ終了)
<CF-LA> ロッカースイッチ	CF-LA-2KC5-2C	CFPB-1CC-1R1W	CLP44-L2
CF-LA-1AC-1	CF-LA-2KC5-3	CFPB-1CC-1R2W	CLP44-L25
CF-LA-1AC-1C	CF-LA-2KC5-4	CFPB-1CC-1R6W	CLP44-L26
CF-LA-1AC-2	CF-LA-2KC5-4C	CFPB-1CC-1R9W	<DP> 押ボタンスイッチ
CF-LA-1AC-2C	CF-LA-2KC5-5	CFPB-1CC-1W1W	DP2-100-B-Z
CF-LA-1AC-3	CF-LA-2KC5-5C	CFPB-1CC-1W2W	DP2-100-M-Z
CF-LA-1AC-3C	CF-LA-2KC5-6	CFPB-1CC-1W6W	DP2-100-O-Z
CF-LA-1AC-4	CF-LA-2KC5-6C	CFPB-1CC-1W9W	DP2-100-R-Z
CF-LA-1AC4-1	CF-LA-2KC-5C	CFPB-1CC-1Y1W	DP2-101B-BL2-Z
CF-LA-1AC4-1C	CF-LA-2KC-6	CFPB-1CC-1Y2W	DP2-101B-GL2-Z
CF-LA-1AC4-2	CF-LA-2KC-6C	CFPB-1CC-1Y6W	DP2-101-BL2-Z
CF-LA-1AC4-2C	CF-LA-2KL-1	CFPB-1CC-1Y9W	DP2-101-BL5-Z
CF-LA-1AC4-4	CF-LA-2KL-2	CFPB-1CC-2R1W	DP2-101-BL8-Z
CF-LA-1AC4-4C	CF-LA-2KL-2C	CFPB-1CC-2R2W	DP2-101-GL2-Z
CF-LA-1AC4-5	CF-LA-2KL-3	CFPB-1CC-2R6W	DP2-101-GL5-Z
CF-LA-1AC4-5C	CF-LA-2KL-3C	CFPB-1CC-2R9W	DP2-101-GL8-Z
CF-LA-1AC4-6	CF-LA-2KL-4	CFPB-1CC-3O1W	DP2-101-KL2-Z

スイッチ生産終了型式一覧 (カタログ販売終了品)

DP2-101-KL5-Z	EL125E-Z	ET115E-Z	ET225P10-Z
DP2-101-KL8-Z	EL210R-Z	ET115F10-Z	ET225P10-Z
DP2-101-OL2-Z	EL215K12-Z	ET115F12-Z	ET310A-Z
DP2-101-OL5-Z	EL215K-Z	ET115G10-Z	ET310D-Z
DP2-101-OL8-Z	EL215N12-Z	ET115H10-Z	ET310E-Z
DP2-101-RL2-Z	EL215N-Z	ET120D12-Z	ET315A12-Z
DP2-101-RL5-Z	EL215P12-Z	ET120F10-Z	ET315F12-Z
DP2-101-RL8-Z	EL215P-Z	ET120F12-Z	ET315G12-Z
DP2-101-WL2-Z	EL225K12-Z	ET120F-Z	ET315H12-Z
DP2-101-WL5-Z	EL225K-14-Z	ET120G10-Z	ET325A12-Z
DP2-101-WL8-Z	EL225K-15-Z	ET120G12-Z	ET325D12-Z
DP2-101-YL2-Z	EL225K-Z	ET120G-Z	ET325E12-Z
DP2-102-BL22-Z	EL225N12-Z	ET120H10-Z	ET330A12-Z
DP2-102-BL25-Z	EL225N-Z	ET120H12-Z	ET330A-Z
DP2-102-GL22-Z	EL225P-Z	ET125A-Z	ET330D12-Z
DP2-102-GL25-Z	ELE115A-Z	ET125D10-Z	ET330E12-Z
DP2-102-GL88-Z	ELE115D-Z	ET125D-Z	ET410K12-Z
DP2-102-KL25-Z	ELE115E-Z	ET125E10-Z	ET410N12-Z
DP2-102-ML25-Z	ELE125A-Z	ET125E12-Z	ET410P12-Z
DP2-102-OL25-Z	ELE125D-Z	ET205K12-Z	ET410R12-Z
DP2-102-RL25-Z	ELE125E-Z	ET205N12-Z	ET410R13-Z
DP2-102-WL25-Z	ELE215K12-Z	ET205P12-Z	ET410S12-Z
DP2-110-B-Z	ELE215K-Z	ET206K12-Z	ET410T12-Z
DP2-110-G-Z	ELE215N-Z	ET206N12-Z	ET415K12-Z
DP2-110-K-Z	ELE225K12-Z	ET210K-Z	ET415K13-Z
DP2-110-O-Z	ELE225K-Z	ET210N10-Z	ET415N12-Z
DP2-110-R-Z	ELE225N12-Z	ET210N-Z	ET415N13-Z
DP2-110-W-Z	ELE225N-Z	ET210P10-Z	ET415P12-Z
DP2-111-BL2-Z	<ES> スライドスイッチ	ET210P-Z	ET415P13-Z
DP2-111-BL5-Z	ES115E12-Z	ET210R10-Z	ET420K12-Z
DP2-111-GL2-Z	ES125A-Z	ET210R12-Z	ET420K13-Z
DP2-111-GL5-Z	ES125D10-Z	ET210R-Z	ET420N12-Z
DP2-111-KL2-Z	ES125D-Z	ET210S10-Z	ET420N13-Z
DP2-111-KL5-Z	ES125E12-Z	ET210S12-Z	ET420P12-Z
DP2-111-ML5-Z	ES125E-Z	ET210S-Z	ET420P13-Z
DP2-111-OL2-Z	ES215K12-Z	ET210T10-Z	ET425P12-Z
DP2-111-OL5-Z	ES215K-Z	ET210T12-Z	<FL> レバー&ロッカースイッチ
DP2-111-OL8-Z	ES215N10-Z	ET210T-Z	FL1E-5M-Z
DP2-111-RL2-Z	ES215N12-Z	ET215K-Z	FL1F-2M-Z
DP2-111-RL5-Z	ES215P12-Z	ET215L10-Z	FL1FA-5M-Z
DP2-111-WL2-Z	ES225K12-Z	ET215L12-Z	FL1G-2M-Z
DP2-111-YL2-Z	ES225N10-Z	ET215M10-Z	FL1G-5M-Z
DP3-101B-L5-Z	ES225N-Z	ET215P10-Z	FL1H-2M-Z
DP3-101-L2-Z	ES225P-Z	ET215R10-Z	FL1H-5M-Z
DP3-101-L5-Z	<ET> トグルスイッチ	ET215R12-Z	FL1HA-5M-Z
DP3-101-L8-Z	ET103A12-Z	ET215S10-Z	FL2D-2M-Z
DPL4-200B-Z	ET103A32-Z	ET215T10-Z	FL2D-5M-Z
DPL4-200-Z	ET103V12-Z	ET215T12-Z	FL2E-2M-Z
<EL/ELE> ロッカースイッチ (シリーズ終了)	ET103V32-Z	ET220M12-Z	FL2E-5M-Z
EL110G-Z	ET110F12-Z	ET220P12-Z	FL2F-2M-Z
EL115A12-Z	ET110G10-Z	ET220R10-Z	FL2F-5M-Z
EL115D12-Z	ET110G12-Z	ET220R12-Z	FL2FA-5M-Z
EL115D-Z	ET110G-Z	ET220R-Z	FL2G-2M-Z
EL115E12-Z	ET110H10-Z	ET220S12-Z	FL2G-5M-Z
EL115E-Z	ET110H12-Z	ET220T10-Z	FL2H-2M-Z
EL120G-Z	ET110H-Z	ET220T12-Z	FL2H-5M-Z
EL125A12-Z	ET115B12-Z	ET220T-Z	FL2HA-5M-Z
EL125A-Z	ET115C10-Z	ET225K10-Z	<FT> トグルスイッチ
EL125D12-Z	ET115D10-Z	ET225N10-Z	FT1F-4M-Z
EL125D-Z	ET115E10-Z	ET225N-Z	FT1F-5M-Z

スイッチ生産終了型式一覧 (カタログ販売終了品)

FT1FA-4M-Z	LP1S-16S-505-Z	LP1W-16G-505-Z	LP1W-27S-209-Z
FT1FA-5M-Z	LP1S-16S-509-Z	LP1W-16G-509-Z	LP1W-27S-229-Z
FT1G-4M-Z	LP1S-16S-559-Z	LP1W-16G-559-Z	LP1W-27S-505-Z
FT1G-5M-Z	LP1S-16S-808-Z	LP1W-16G-808-Z	LP1W-27S-509-Z
FT1H-2M-Z	LP1S-16S-809-Z	LP1W-16G-809-Z	LP1W-27S-559-Z
FT1H-4M-Z	LP1S-16S-889-Z	LP1W-16G-889-Z	LP1W-27S-808-Z
FT1H-5M-Z	LP1S-17G-202-Z	LP1W-16S-202-Z	LP1W-27S-809-Z
FT1HA-4M-Z	LP1S-17G-209-Z	LP1W-16S-209-Z	LP1W-27S-889-Z
FT1HA-5M-Z	LP1S-17G-229-Z	LP1W-16S-229-Z	LP2S-16G-202-Z
FT2E-4M-Z	LP1S-17G-505-Z	LP1W-16S-505-Z	LP2S-16G-209-Z
FT2E-5M-Z	LP1S-17G-509-Z	LP1W-16S-509-Z	LP2S-16G-229-Z
FT2F-2M-Z	LP1S-17G-559-Z	LP1W-16S-808-Z	LP2S-16G-509-Z
FT2F-4M-Z	LP1S-17G-808-Z	LP1W-16S-809-Z	LP2S-16G-559-Z
FT2F-5M-Z	LP1S-17G-809-Z	LP1W-16S-889-Z	LP2S-16G-808-Z
FT2FA-4M-Z	LP1S-17G-889-Z	LP1W-17G-202-Z	LP2S-16G-809-Z
FT2FA-5M-Z	LP1S-17S-202-Z	LP1W-17G-209-Z	LP2S-16G-889-Z
FT2G-4M-Z	LP1S-17S-209-Z	LP1W-17G-229-Z	LP2S-16S-202-Z
FT2G-5M-Z	LP1S-17S-229-Z	LP1W-17G-505-Z	LP2S-16S-209-Z
FT2H-2M-Z	LP1S-17S-505-Z	LP1W-17G-509-Z	LP2S-16S-229-Z
FT2H-4M-Z	LP1S-17S-509-Z	LP1W-17G-559-Z	LP2S-16S-505-Z
FT2H-5M-Z	LP1S-17S-559-Z	LP1W-17G-808-Z	LP2S-16S-509-Z
FT2HA-4M-Z	LP1S-17S-808-Z	LP1W-17G-809-Z	LP2S-16S-559-Z
FT2HA-5M-Z	LP1S-17S-809-Z	LP1W-17G-889-Z	LP2S-16S-808-Z
<HLA> ロッカースイッチ (シリーズ終了)	LP1S-17S-889-Z	LP1W-17S-202-Z	LP2S-16S-809-Z
HLA112A	LP1S-26G-202-Z	LP1W-17S-209-Z	LP2S-16S-889-Z
HLA112A12	LP1S-26G-209-Z	LP1W-17S-229-Z	LP2S-17G-202-Z
HLA112D	LP1S-26G-229-Z	LP1W-17S-505-Z	LP2S-17G-209-Z
HLA112D12	LP1S-26G-509-Z	LP1W-17S-509-Z	LP2S-17G-229-Z
HLA208K	LP1S-26G-559-Z	LP1W-17S-559-Z	LP2S-17G-505-Z
HLA208K12	LP1S-26G-808-Z	LP1W-17S-808-Z	LP2S-17G-509-Z
HLA208N	LP1S-26G-809-Z	LP1W-17S-809-Z	LP2S-17G-559-Z
HLA208N12	LP1S-26G-889-Z	LP1W-17S-889-Z	LP2S-17G-808-Z
<HLC> ロッカースイッチ (シリーズ終了)	LP1S-26S-202-Z	LP1W-26G-202-Z	LP2S-17G-809-Z
HLC112A	LP1S-26S-209-Z	LP1W-26G-209-Z	LP2S-17G-889-Z
HLC112A12	LP1S-26S-229-Z	LP1W-26G-229-Z	LP2S-17S-202-Z
HLC112D	LP1S-26S-505-Z	LP1W-26G-505-Z	LP2S-17S-209-Z
HLC112D12	LP1S-26S-509-Z	LP1W-26G-509-Z	LP2S-17S-229-Z
HLC208K	LP1S-26S-559-Z	LP1W-26G-559-Z	LP2S-17S-505-Z
HLC208K12	LP1S-26S-808-Z	LP1W-26G-808-Z	LP2S-17S-509-Z
HLC208N	LP1S-26S-809-Z	LP1W-26G-809-Z	LP2S-17S-559-Z
HLC208N12	LP1S-26S-889-Z	LP1W-26G-889-Z	LP2S-17S-808-Z
<HSS> スライドスイッチ (シリーズ終了)	LP1S-27G-202-Z	LP1W-26S-202-Z	LP2S-17S-809-Z
HSS112A	LP1S-27G-505-Z	LP1W-26S-209-Z	LP2S-17S-889-Z
HSS112A12	LP1S-27G-509-Z	LP1W-26S-229-Z	LP2S-26G-209-Z
HSS112D	LP1S-27G-559-Z	LP1W-26S-505-Z	LP2S-26G-505-Z
HSS112D12	LP1S-27G-808-Z	LP1W-26S-509-Z	LP2S-26G-509-Z
HSS208K	LP1S-27G-809-Z	LP1W-26S-559-Z	LP2S-26G-559-Z
HSS208K12	LP1S-27G-889-Z	LP1W-26S-808-Z	LP2S-26G-808-Z
HSS208N	LP1S-27S-202-Z	LP1W-26S-809-Z	LP2S-26G-809-Z
HSS208N12	LP1S-27S-209-Z	LP1W-26S-889-Z	LP2S-26G-889-Z
<LP> 蛍光式スイッチ	LP1S-27S-229-Z	LP1W-27G-202-Z	LP2S-26S-202-Z
LP1S-16G-209-Z	LP1S-27S-505-Z	LP1W-27G-209-Z	LP2S-26S-209-Z
LP1S-16G-229-Z	LP1S-27S-509-Z	LP1W-27G-229-Z	LP2S-26S-229-Z
LP1S-16G-505-Z	LP1S-27S-559-Z	LP1W-27G-505-Z	LP2S-26S-505-Z
LP1S-16G-559-Z	LP1S-27S-808-Z	LP1W-27G-509-Z	LP2S-26S-509-Z
LP1S-16G-808-Z	LP1S-27S-809-Z	LP1W-27G-559-Z	LP2S-26S-559-Z
LP1S-16G-889-Z	LP1S-27S-889-Z	LP1W-27G-808-Z	LP2S-26S-808-Z
LP1S-16S-202-Z	LP1W-16G-202-Z	LP1W-27G-809-Z	LP2S-26S-809-Z
LP1S-16S-209-Z	LP1W-16G-209-Z	LP1W-27G-889-Z	LP2S-26S-889-Z
LP1S-16S-229-Z	LP1W-16G-229-Z	LP1W-27S-202-Z	LP2S-27G-202-Z

スイッチ生産終了型式一覧 (カタログ販売終了品)

LP2S-27G-209-Z	LP2W-26G-889-Z	MCS222N-2016	MRK1031G-Z
LP2S-27G-229-Z	LP2W-26S-202-Z	MCS222N-2018	MRK1031H-R-Z
LP2S-27G-505-Z	LP2W-26S-209-Z	MCS231PA-1011	MRK1031H-Z
LP2S-27G-559-Z	LP2W-26S-229-Z	MCS232PA-1012	MRK1031K-R-Z
LP2S-27G-808-Z	LP2W-26S-505-Z	MCS232PA-1013	MRK1031K-Z
LP2S-27G-809-Z	LP2W-26S-509-Z	MCS421N-1014	MRK1031L-R-Z
LP2S-27G-889-Z	LP2W-26S-559-Z	MCS421N-2031	MRK1041D-R-Z
LP2S-27S-202-Z	LP2W-26S-808-Z	MCS421N-2033	MRK1041D-Z
LP2S-27S-209-Z	LP2W-26S-809-Z	MCS422N-1015	MRK2012A-R-Z
LP2S-27S-229-Z	LP2W-26S-889-Z	MCS422N-2009	MRK2012A-Z
LP2S-27S-505-Z	LP2W-27G-202-Z	MCS422N-2030	MRK2012B-R-Z
LP2S-27S-509-Z	LP2W-27G-209-Z	MCS422N-2032	MRK2012B-Z
LP2S-27S-559-Z	LP2W-27G-229-Z	MCS431PA-2010	MRK2012C-R-Z
LP2S-27S-808-Z	LP2W-27G-505-Z	MCS442NN-1016	MRK2012C-Z
LP2S-27S-809-Z	LP2W-27G-509-Z	MCS622N-2011	MRK2022B-R-Z
LP2S-27S-889-Z	LP2W-27G-559-Z	<MFS> スライドスイッチ	MRK2022B-Z
LP2W-16G-202-Z	LP2W-27G-808-Z	MFS101D-11-Z	MRK2031D-R-Z
LP2W-16G-209-Z	LP2W-27G-809-Z	MFS101D-15-Z	MRK2031E-R-Z
LP2W-16G-229-Z	LP2W-27G-889-Z	<MHS> スライドスイッチ (シリーズ終了)	MRK2031E-Z
LP2W-16G-505-Z	LP2W-27S-202-Z	MHS121	MRK2031F-R-Z
LP2W-16G-509-Z	LP2W-27S-209-Z	MHS122	MRK2031F-Z
LP2W-16G-559-Z	LP2W-27S-229-Z	MHS122-1	MRK2031G-R-Z
LP2W-16G-808-Z	LP2W-27S-505-Z	MHS131	MRK2031G-Z
LP2W-16G-809-Z	LP2W-27S-509-Z	MHS132	MRK2031H-R-Z
LP2W-16G-889-Z	LP2W-27S-559-Z	MHS221	MRK2031H-Z
LP2W-16S-202-Z	LP2W-27S-808-Z	MHS222	MRK2031K-R-Z
LP2W-16S-209-Z	LP2W-27S-809-Z	MHS231	MRK2031K-Z
LP2W-16S-229-Z	LP2W-27S-889-Z	MHS232	MRK2031L-R-Z
LP2W-16S-505-Z	<LTM/LTR> 蛍光式スイッチ	MHS422	MRK2031L-Z
LP2W-16S-509-Z	LTM2-01-L6	<MR> ロータリスイッチ	MRK2041D-R-Z
LP2W-16S-559-Z	LTMG2-01-L6	MR1-12-Z	<MRKC> キースイッチ (シリーズ終了)
LP2W-16S-808-Z	LTR2-01-L6	MR2-6G-Z	MRKC1012A-01-Z
LP2W-16S-809-Z	<LTM3-01> 蛍光式スイッチ (シリーズ終了)	MR2-6-Z	MRKC1012A-R-01-Z
LP2W-16S-889-Z	LTM3-01-L2C-Z	MR3-3G-Z	MRKC1031L-01-Z
LP2W-17G-202-Z	LTM3-01-L2R-Z	MR3-3-Z	MRKC1031L-R-01-Z
LP2W-17G-209-Z	LTM3-01-L5C-Z	MR3-4G-Z	MRKC1033D-R-01-Z
LP2W-17G-229-Z	LTM3-01-L5M-Z	MR3-4-Z	MRKC1041L-01B-Z
LP2W-17G-505-Z	LTM3-01-L8C-Z	MR4-3-Z	MRKC1041L-01-Z
LP2W-17G-509-Z	LTM3-01-L8Y-Z	<MRE> ロータリスイッチ (シリーズ終了)	MRKC1052B-C-10
LP2W-17G-559-Z	LTMG3-01-L2C-Z	MRE1-10G-Z	<MRKS> キースイッチ (シリーズ終了)
LP2W-17G-808-Z	LTMG3-01-L2R-Z	MRE1-10-Z	MRKS1051N-R-Z
LP2W-17G-809-Z	LTMG3-01-L5C-Z	MRE2-5G-Z	MRKS1051N-Z
LP2W-17G-889-Z	LTMG3-01-L5M-Z	MRE2-5-Z	<MRP> パルススイッチ (シリーズ終了)
LP2W-17S-202-Z	LTMG3-01-L8C-Z	MRE3-3G-Z	MRP1-20-1-Z
LP2W-17S-209-Z	LTMG3-01-L8Y-Z	MRE3-3-Z	MRP1-20-R-Z
LP2W-17S-229-Z	<MCS> スライドスイッチ (シリーズ終了)	MRE4-2G-Z	<MSP> 押ボタンスイッチ
LP2W-17S-505-Z	MCS122D-1002	MRE4-2-Z	MSP103BG-Z
LP2W-17S-509-Z	MCS122D-2001	<MRK> キースイッチ	MSP103CG-Z
LP2W-17S-559-Z	MCS131EA-1004	MRK1012B-R-Z	<MTS> スライドスイッチ (シリーズ終了)
LP2W-17S-808-Z	MCS132EA-1005	MRK1012C-R-Z	MTS124
LP2W-17S-809-Z	MCS221N-1006	MRK1012C-Z	MTS134
LP2W-17S-889-Z	MCS221N-1007	MRK1022B-R-Z	<S> スライドスイッチ (シリーズ終了)
LP2W-26G-202-Z	MCS221N-1008	MRK1022B-Z	S-1-Z
LP2W-26G-209-Z	MCS221N-2017	MRK1031D-R-Z	S-2-Z
LP2W-26G-229-Z	MCS222N-1009	MRK1031D-Z	S-3-Z
LP2W-26G-505-Z	MCS222N-1010	MRK1031E-R-Z	S-4-Z
LP2W-26G-509-Z	MCS222N-2002	MRK1031E-Z	<SL220SD> レバースイッチ (シリーズ終了)
LP2W-26G-559-Z	MCS222N-2003	MRK1031F-R-Z	SL220SD-15-Z
LP2W-26G-808-Z	MCS222N-2004	MRK1031F-Z	<SLA215K> ロッカースイッチ (シリーズ終了)
LP2W-26G-809-Z	MCS222N-2005	MRK1031G-R-Z	SLA215K

スイッチ生産終了型式一覧 (カタログ販売終了品)

SLA215K-5	SLE6A2-8	SP210L-Z	TR3-21-L02
SLA215K-6	SLE6A4	SP210M-Z	TR3-21-L05
SLA215K-7	SLE6A4-50	SP210N-Z	TR3-21-L08
<SLE10> ロッカースイッチ	SLE6A4-8	SP210R-Z	TR3-21-L2
SLE10A2	SLE6A4-9	<S2P> 押ボタンスイッチ (シリーズ終了)	TR3-21-L202
SLE10A2-8	SLE6A5	S2P210K-Z	TR3-21-L205
SLE10A2-9	SLE6A-50	S2P210N-Z	TR3-21-L208
SLE10A4	SLE6A5-50	S2P210P-Z	TR3-21-L5
SLE10A4-5	SLE6A5-7	<SPP> 押ボタンスイッチ (シリーズ終了)	TR3-21-L502
SLE10A4-6	SLE6A5-8	SPP203KA-Z	TR3-21-L505
SLE10A4-7	SLE6A5-9	SPP203K-Z	TR3-21-L508
SLE10A4-8	SLE6A-8	SPP203N-Z	TR3-21-L8
SLE10A4-9	SLE6D	SPP210KA-Z	TR3-21-L805
SLE10A-5	SLE6D2	SPP210K-Z	TR3-21-L808
SLE10A5-5	SLE6D2-5	SPP210N-Z	<TME> タクティールスイッチ
SLE10A5-6	SLE6D2-50	<SS> スライドスイッチ (シリーズ終了)	TMEG1-01-Z
SLE10A5-7	SLE6D2-6	SS110A-Z	<SG> トリガースイッチ (終了)
SLE10A5-8	SLE6D2-7	SS110D-Z	SGE106CV-A-Z
SLE10A5-9	SLE6D2-8	SS110E-Z	SGE108CV-A-Z
SLE10A-8	SLE6D2-9	SS210K-Z	SGE108CV-Z
SLE10A-9	SLE6D4	SS210N-Z	SGE110F
SLE10D	SLE6D4-5	SS210P-Z	SGE110F-A
SLE10D2	SLE6D4-50	SS220K-23-Z	SGE110FR
SLE10D2-5	SLE6D4-6	<STE> トグルスイッチ (シリーズ終了)	SGE115F-A-Z
SLE10D2-6	SLE6D4-7	STE115D10-Z	SGEL106CV-A-Z
SLE10D2-7	SLE6D4-8	<TM/TR> 昭光式スイッチ	SGEL106CVR-A-Z
SLE10D2-8	SLE6D4-9	TM2-21-L6	SGEL108CV-A-Z
SLE10D2-9	SLE6D5	TM3-21-L002	SGEL115CDY-1-Z
SLE10D4	SLE6D-5	TM3-21-L005	SGEL115F-A-Z
SLE10D4-5	SLE6D-50	TM3-21-L008	
SLE10D4-6	SLE6D5-5	TM3-21-L02	
SLE10D4-7	SLE6D5-50	TM3-21-L05	
SLE10D4-8	SLE6D5-6	TM3-21-L08	
SLE10D4-9	SLE6D5-7	TM3-21-L2	
SLE10D5	SLE6D5-8	TM3-21-L202	
SLE10D-5	SLE6D5-9	TM3-21-L205	
SLE10D5-5	SLE6D-6	TM3-21-L208	
SLE10D5-6	SLE6D-7	TM3-21-L5	
SLE10D5-7	SLE6D-8	TM3-21-L502	
SLE10D5-8	SLE6D-9	TM3-21-L505	
SLE10D5-9	<SMAP> 押ボタンスイッチ	TM3-21-L508	
SLE10D-6	SMAP2F-2M-Z	TM3-21-L8	
SLE10D-7	SMAP2F-5M-E-Z	TM3-21-L802	
SLE10D-8	SMAP2F-5M-Z	TM3-21-L805	
SLE10D-9	<SP101> 押ボタンスイッチ	TM3-21-L808	
<SLE210K> ロッカースイッチ	SP101F	TMG2-21-L6	
SLE210K11	SP101F-P	TMG3-21-L005	
SLE210K11-5	<SPC103> 押ボタンスイッチ (シリーズ終了)	TMG3-21-L08	
SLE210K11-7	SPC103F	TMG3-21-L2	
SLE210K11-9	SPC103F-C	TMG3-21-L202	
SLE210K4-5	SPC103F-P	TMG3-21-L205	
SLE210K4-7	<SP> 押ボタンスイッチ (シリーズ終了)	TMG3-21-L208	
SLE210K4-9	SP103AB-Z	TMG3-21-L5	
SLE210K9	SP103B-Z	TMG3-21-L502	
SLE210K9-5	SP103C-Z	TMG3-21-L505	
SLE210K9-6	SP103V-Z	TMG3-21-L8	
SLE210K9-7	SP110AC-Z	TR2-21-L6	
SLE210K9-9	SP110A-Z	TR3-21-L002	
<SLE6> ロッカースイッチ	SP110D-Z	TR3-21-L005	
SLE6A2-50	SP210K-Z	TR3-21-L008	